

New Apex Series

Ergonomic Mobile Powered Workstations



Improved Safety & Comfort to Accommodate Any Operator
www.newcastlesys.com/apex-series

Apex Series SLIM Workstations

The Apex Series SLIM mobile workstation with our new height-adjustable ergonomic mast raises the bar for workplace mobility and safety. This compact lightweight workstation provides mobile power to your devices including laptops, tablets, 1-2 LCDs or touchscreens, barcode printers, scanners and more for 8+ hours at a time.

This flexible workstation serves a vast range of industries on the production floor including aerospace, automotive, electronics, medical devices and anywhere that worker comfort and safety matters as much as productivity.


Ideal applications include visual work instruction, asset tracking, operational training, supervisor floor station, quality assurance, batch traceability, on-demand label printing/scanning and more.

Outstanding Features & Benefits:

- Eliminate the need for costly cable drops and dangerous extension cords
- **Narrow Footprint:** Only 19" in width to navigate the most narrow aisles
- **Ergonomic Height Range:** 30" - 48" from floor to top shelf to accommodate any operator
- **Multi-Screen Capabilities:** Holds up to (2) LCDs either side by side (as shown) or vertically stacked
- **Hardware-Friendly:** Quiet, seamless AC power (no need to source for DC specific hardware)
- **Power System to Fit Your Needs:** Swappable lightweight lithium batteries for 24/7 operation or SLA for 8-12+ hours of operation



Adjust height in seconds with the touch of a button

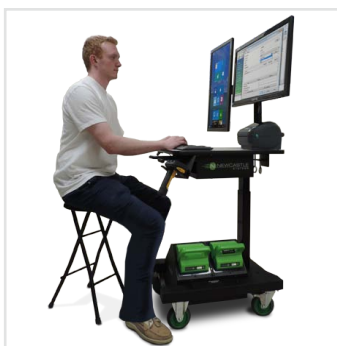

Sit-stand option provides improved safety and comfort



Ergonomic height range can accommodate any operator

Technical Specifications

Height Adjustable:	Top shelf electronically adjustable from 30 - 48" (762 - 1,219 mm)
Shelf:	19" wide x 24.75" long, (483 x 629 mm)
Total Weight Capacity:	Up to 55 lbs. (25 kg)
Casters:	5" (127 mm) non-marking casters, 2 fixed, 2 locking swivel
Battery	Hot Swappable LIFEPO4: * 460 / 920 wh Sealed Lead Acid: 1200 wh
Color:	Black Powder Coat
Dimensions:	19" wide x 26" long x 30 - 48" high (483 x 660 x 1763 - 1,219 mm)
Weight:	Hot Swappable Unit (1 or 2 batteries): 97 lbs/109 lbs (44.1 kg/49.5 kg) SLA Unit: 167 lbs (75.9 kg)

* (1) hot swappable battery system recommended for powering laptop and scanner only. If LCD/touchscreen and/or printer is required, a (2) battery system is recommended.