




Smarter Technology. Exceptional Results.



# Print & Apply Label Applicator PA19

The most compact label applicator in the industry,  
developed to save valuable space on the production line.

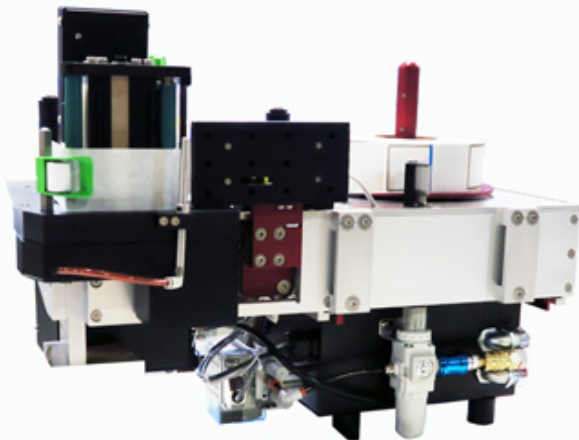

■ The Model PA19 Printer Applicator delivers on its promise of **reliability, accuracy and simplicity of operation**. That converts into lower operating costs and increased productivity for your operation.


■ Key Features & Benefits Include:

- General Data exclusive tamp shift and flex tamp with heavy duty dual cylinder construction
- Easy access to electrical panel and pneumatics
- Removable printer unit
- Automatic setup with multiple programmable labels for easy change-overs to different types and sizes
- High accuracy label placement
- Multi-language touch screen operator panel
- USB, Ethernet, Serial and WiFi connectivity
- Advanced PLC & I/O

# Product Specifications:

Dimensions: WxDxH	23.0x11x15.25 (in)   635x279x387 (mm)	Printable Resolution:	203, 300 or 600 dpi
Weight:	65 lbs   75 kg	Air (as needed):	80 psi @ 4 cfm
Voltage:	115 Volts AC 60Hz 5 Amps   220 Volts AC 50Hz 2.5 Amps	Dispense Accuracy:	Up to +/- 1/32" (.8mm)
Label Width:	Up to 4.2" (107 mm)	Dispense Speed:	Up to 12" (305mm) per second
Label Length:	Up to 36" (178 mm) - Dependent on Tamp Pad		

Options:	Roll around or fix stand	Air-blow conversion.
	Conveyor side mounting bracket	90° swing front tamp configuration
	Label on pad detection	Corner wipe around configuration
	3 color light stack	Custom Programming

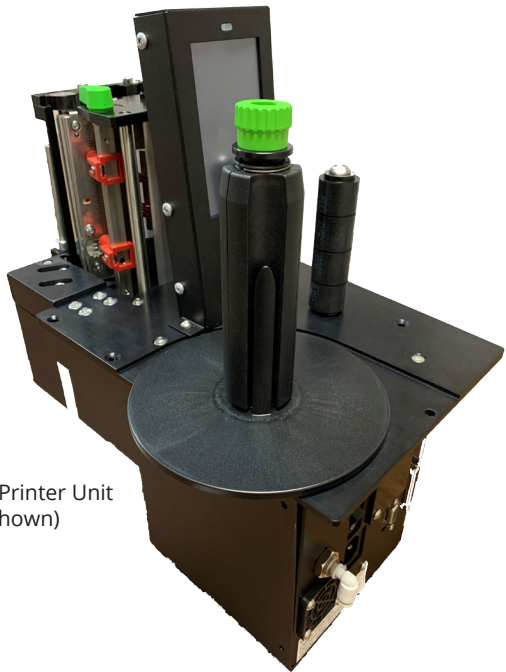

Removable Printer Unit  
(PA19-200 shown)

## More Information

844.643.1129  
www.general-data.com  
talktous@general-data.com

©2020 General Data Company, Inc. All rights reserved. Specifications are current at the time of publication; however, they are subject to change without notification. All trademarks and registered trademarks are property of General Data Company, Inc., Cincinnati, Ohio, USA.



General Data Company, Inc.  
4354 Ferguson Road, Cincinnati, OH 45245  
844.643.1129

Email: talktous@general-data.com  
Web: www.general-data.com  
  
Service:  
PH: 800.245.5029  
Email: customersupport@general-data.com