


# General Data

Smarter Technology. Exceptional Results.

## PA816

### Print & Apply Label Applicator

*The General Data PA816 offers the flexibility to configure the device to fit your specific application needs. Choose from a variety of OEM printers (Zebra, SATO, Datamax, TSC, CAB, and TEC) and application options (roll-around, corner wipe, 90° swing, etc.) Batch and On-Demand modes offer the capability to switch from identical batch label printing and application to sequential/serialized label printing and application.*

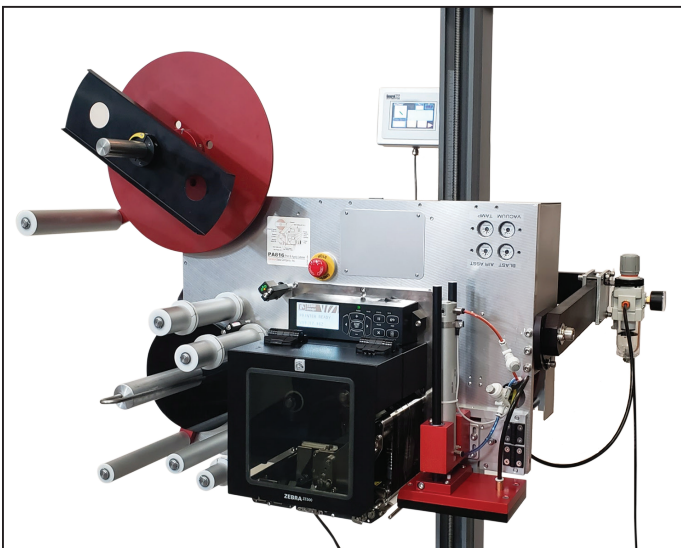

#### ■ Built To Last

The PA816 offers exclusive features such as a tamp shift and flex tamp, along with heavy-duty dual cylinder construction, that allow labels to be applied to a wide variety of products.

#### ■ Easy Upgrades & Maintenance

This unit provides easy access to electrical panel and pneumatics, including a removable OEM (Zebra, SATO, Datamax, TSC, CAB, and TEC) printer unit. You also have the option to pair the PA816 with the General Data Smart Touch Panel for a complete print and apply labeling solution.

#### ■ Simple Setup

The PA816 offers automatic setup with multiple programmable labels for easy changeovers to different types and sizes with high accuracy label placement. This product also features a multi-language touch screen operator panel.

#### ■ Multiple Connectivity Options

The PA816 comes with USB, Ethernet, Serial and Wi-Fi connectivity options. Plus advance PLC & I/O.


# Product Specifications:

Dimensions: WxDxH	30x25x20 (in)   762x635x508 (mm)	Printable Resolution:	203, 300, or 600dpi
Weight:	76 lbs   35 kg	Air (as needed):	80 psi @ 4 cfm
Voltage:	115 Volts AC 60Hz 8 Amps   220 Volts AC 50Hz 2.5 Amps	Dispense Accuracy:	Up to +/- 1/32" (.8mm)
Label Width:	Standard up to 4.2" (107 mm) or up to 6.6" (168 mm)	Label Length:	Up to 12" (305 mm) per second
Print Methods:	Thermal transfer and/or direct thermal printing		


Options:	Zebra, Datamax, SATO, TSC, CAB & TEC available	Custom programming
	RFID	Left or right hand configuration
	Roll around or fixed stand	Air blow conversion
	Conveyor side mounting bracket 90° swing	Front tamp configuration
	Label on pad detection	Corner wipe around configuration
	3-color light stack	Low label detection



Top-apply labeling

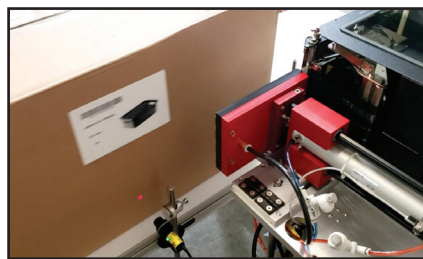

Side-apply labeling

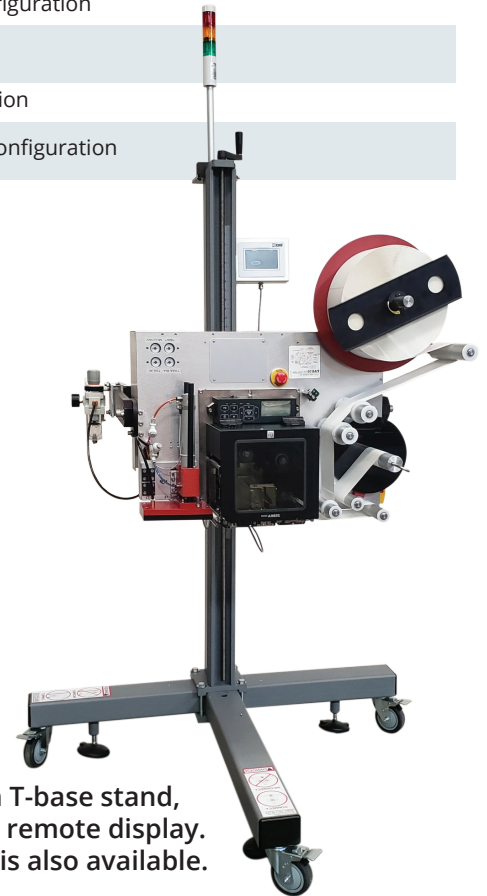

Shown with T-base stand, light tower, & remote display. H-base stand is also available.



## More Information

844.643.1129 | [www.general-data.com](http://www.general-data.com) | [talktous@general-data.com](mailto:talktous@general-data.com)

©2023 General Data Company, Inc. All rights reserved. Specifications are current at the time of publication; however, they are subject to change without notification. All trademarks and registered trademarks are property of General Data Company, Inc., Cincinnati, Ohio, USA.



General Data Company, Inc.  
4354 Ferguson Road, Cincinnati, OH 45245  
844.643.1129

Email: [talktous@general-data.com](mailto:talktous@general-data.com)  
Web: [www.general-data.com](http://www.general-data.com)

Service:  
PH: 800.245.5029  
Email: [customersupport@general-data.com](mailto:customersupport@general-data.com)