

Model #MINI-CON BLP:

Label Printer and Applicator for Pouches and Flat Boxes.

Tach-It's Print and Apply labeling system for heavyweight bags, zip-lock bags, pouches and flat boxes.

Uses standard desktop printers made by Zebra, TSC, Godex and Astronova. We do not supply the printer, use your existing printer or the printer best for your application.


Perfect for pharmaceuticals, medical packaging, food service, retail and for packagers utilizing zip-lock bags, barrier bags, vacuum bags, heavyweight bags, pouches and flat boxes.

Dual Independent adjustable speed feed motors and straight line feed rollers for consistent, fast and accurate feed and label placement.

Operator places a stack of their product to be labeled into the machine and the Mini-Con BLP will print the labels, feed the product and apply labels to each product automatically.

Utilizing the industry tried and proven MCU Labeling System by Tach-It, for ease of use and years of reliable service.

The applicator has a digital touch screen controller with 5 memory presets, dwell timer for exact label placement, target counter and heavy duty construction.

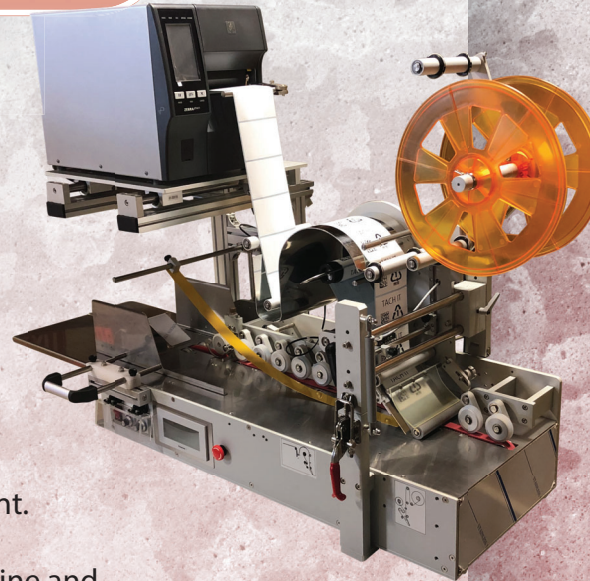

* Please note the roll holder for pre-printed labels is available at an additional cost.

TACH-IT MODEL #MINI-CON BLP SPECIFICATIONS:

Dimensions:	51" (1292 mm) x 24" (600 mm) x 37" (940 mm)
Weight:	350 Lbs (159Kgs)
Label Size Based on Applicator May be affected by printer used:	Minimum 3/4" (20 mm) Width x 1.25" (30 mm) Length Maximum 4.75" (120 mm) Width x 8" (200 mm) Length
Product Size:	Minimum 3.5" (90 mm) Width x 8" (200 mm) Length Maximum 13" (330 mm) Width x 13 1/2" (350 mm) Length
Power:	110 Volt
Maximum Diameter of Label Roll:	12" (300 mm) or based on printer capacity
Core Size:	3" (76 mm) or based on printer core size

Ben Clements and Sons, Inc.

50 Ruta Court, South Hackensack, New Jersey 07606
Tel: 201-440-5500 or 800-222-5540 Fax: 201-440-1455
Email: sales@tach-it.com Web: www.tach-it.com